



# PROLINK SHIFT PLATE MOUNTING INSTRUCTION


1/ SCRAP THE HOLES AREA AND REMOVE THE INFORMATION STICKER (IF NECESSARY)

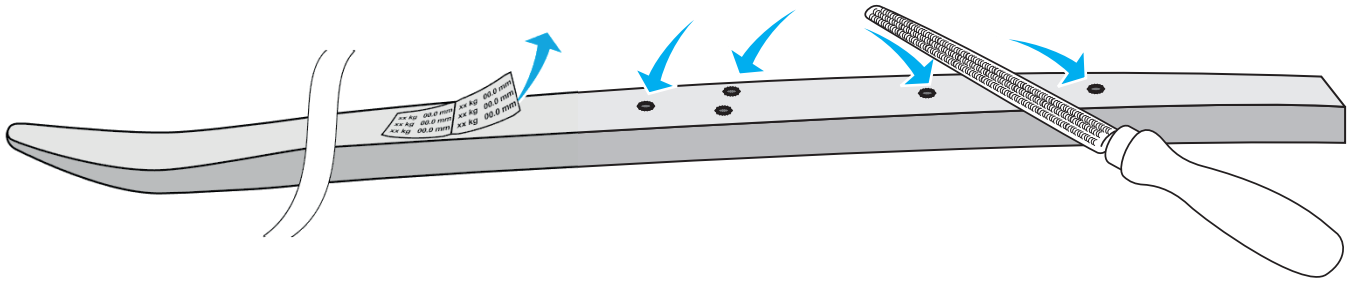


2/ CLEAN THE SKI SURFACE WITH THE PROVIDED WIPE 15CM AHEAD OF THE FRONT HOLE.  
USE THE WIPE ONLY FROM BACK TO FRONT

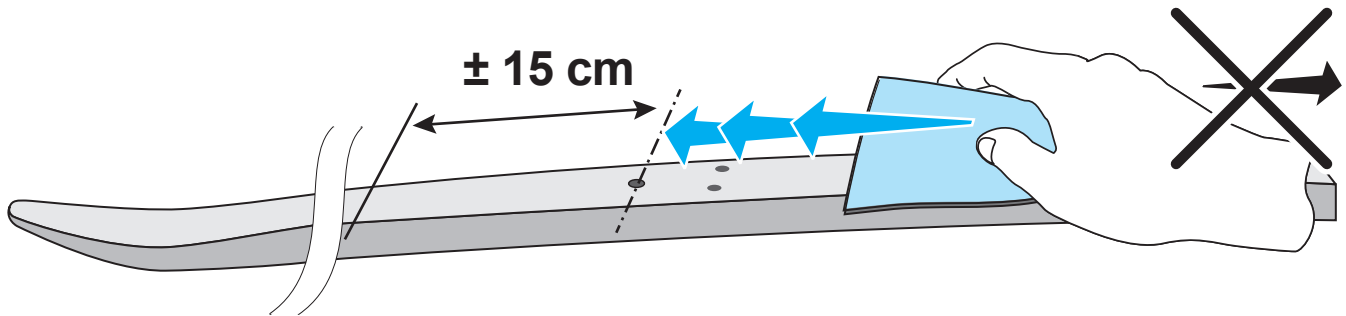


3/ POSITION THE PLATE ON THE HOLES

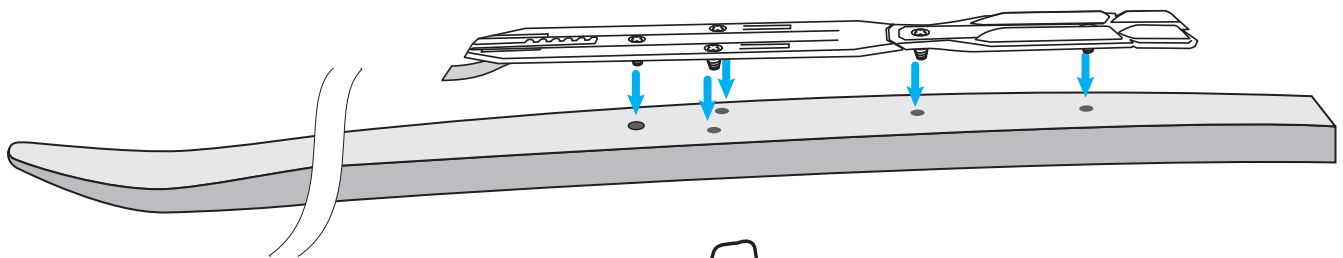


4/ SCREW ALL SCREWS HALFWAY

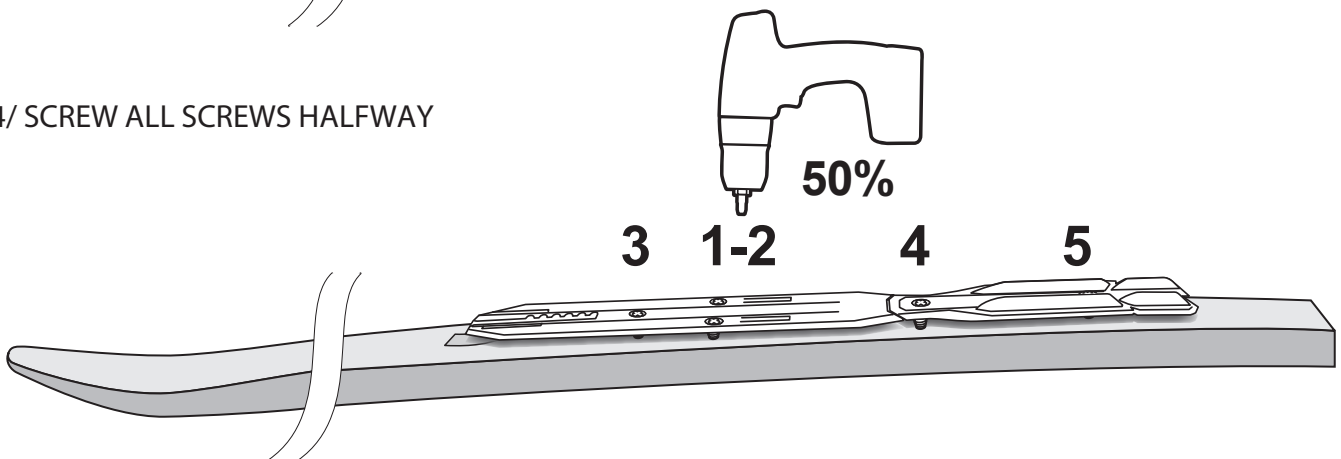


5/ FINISH THE SCREWING. THEN TIGHTEN CARREFULLY BY HAND

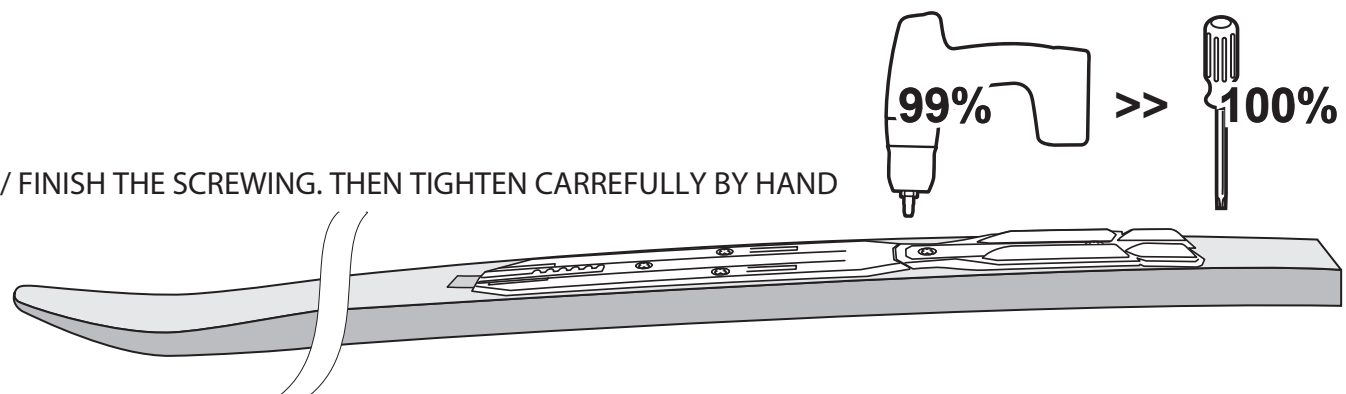


Turn 


6/REMOVE THE TAPE PROTECTOR BY PULLING THE STRAP

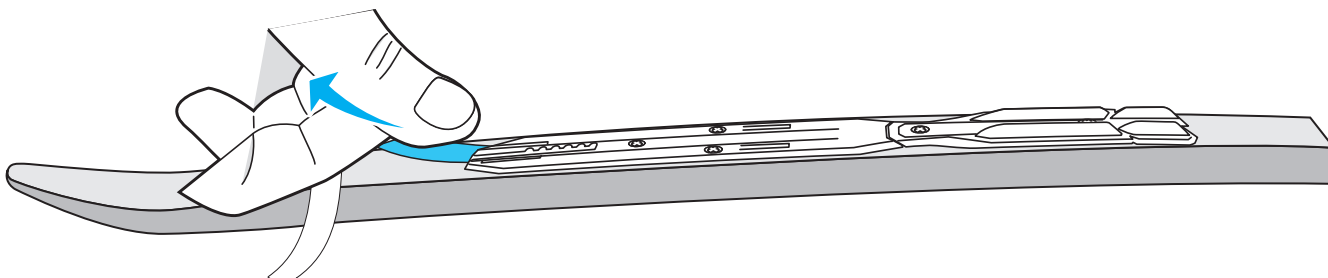


7/PRESS STRONGLY DURING 20" AT LEAST

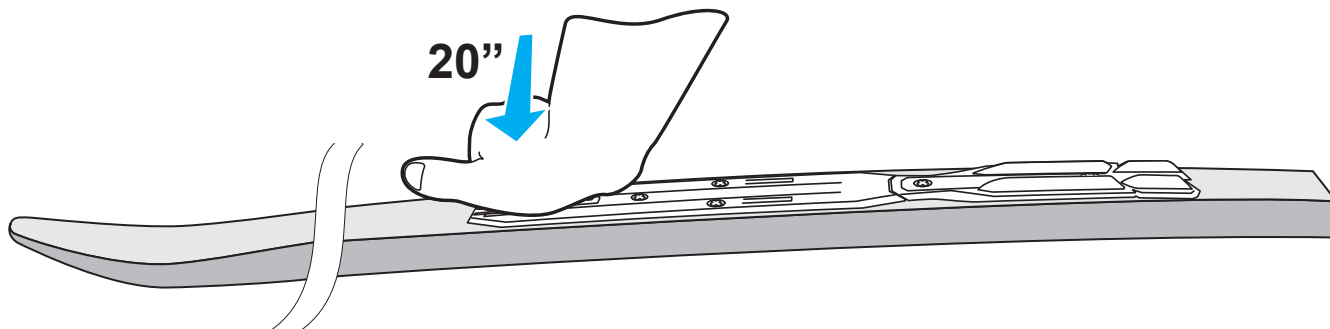


8/ PLACE THE STICKER ON THE HEEL PLATE

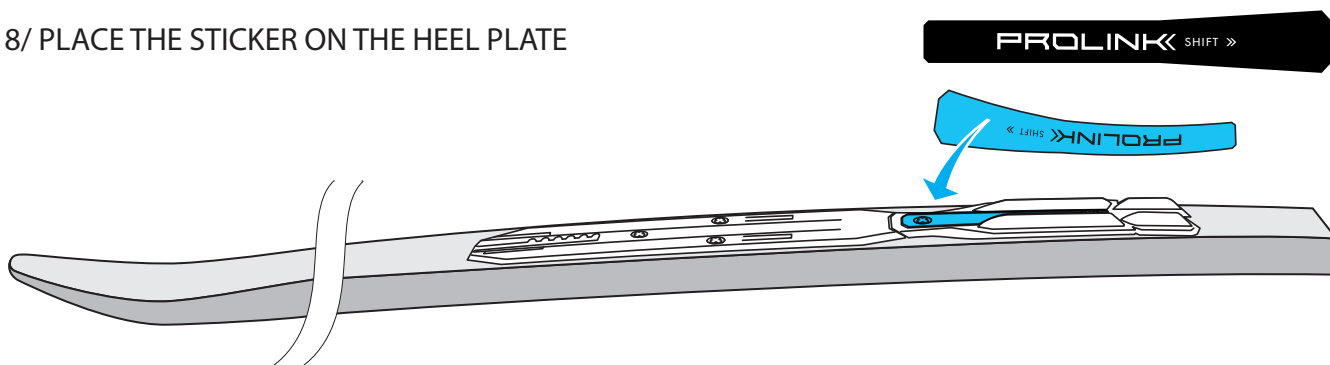

9/ WAITING TIME

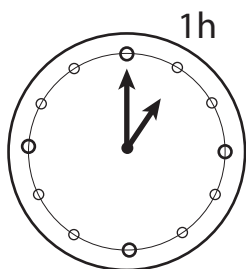

WAIT 1 HOUR BEFORE  
MOUNTING THE BINDING

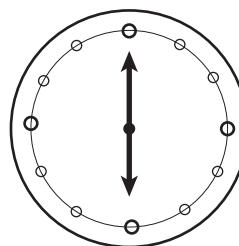

WAIT 6 HOURS BEFORE  
USING ON SNOW